



Purchase Initiation

1. Enter the **dollar amount(s)** including tax and tap **Next**.
2. Review the *Subtotal* and *Total* amounts and tap **Next** if everything is correct.
3. Select **Card payment** and tap **Next**.
4. Select **tip option** and tap **Next**.
5. Confirm the **amount** and tap **Next**.



* Android® screens shown

Insert Debit Card Payment

1. Customer inserts their **debit card**.
2. Customer **confirms the amount** and selects **YES (F1)**.
3. Customer selects their account **CHQ (F1)** or **SAV (F4)**.
4. Customer enters their **PIN** and presses **OK**.

OR



Contactless Debit Card Payment

1. Customer taps their **debit card** against the *PINPad* screen.

OR




Swipe Debit Card Payment


1. Customer swipes their **debit card**.
2. Customer **confirms the amount** and press **YES**.
3. Customer selects account **CHQ (F1)** or **SAV (F4)**.
4. Customer enters their **PIN** and press **OK**.



Purchase Completion

1. Enter **customer's email address** for the receipt and tap **Done** or tap **Skip** to bypass entering this information.
2. Tap **Continue**.
3. Enter **purchase notes**, the **invoice number** and tap **Done** or tap **Skip** to bypass entering this information.
4. The transaction is now completed.

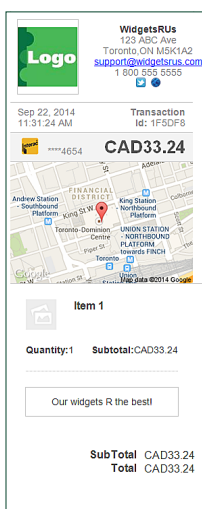

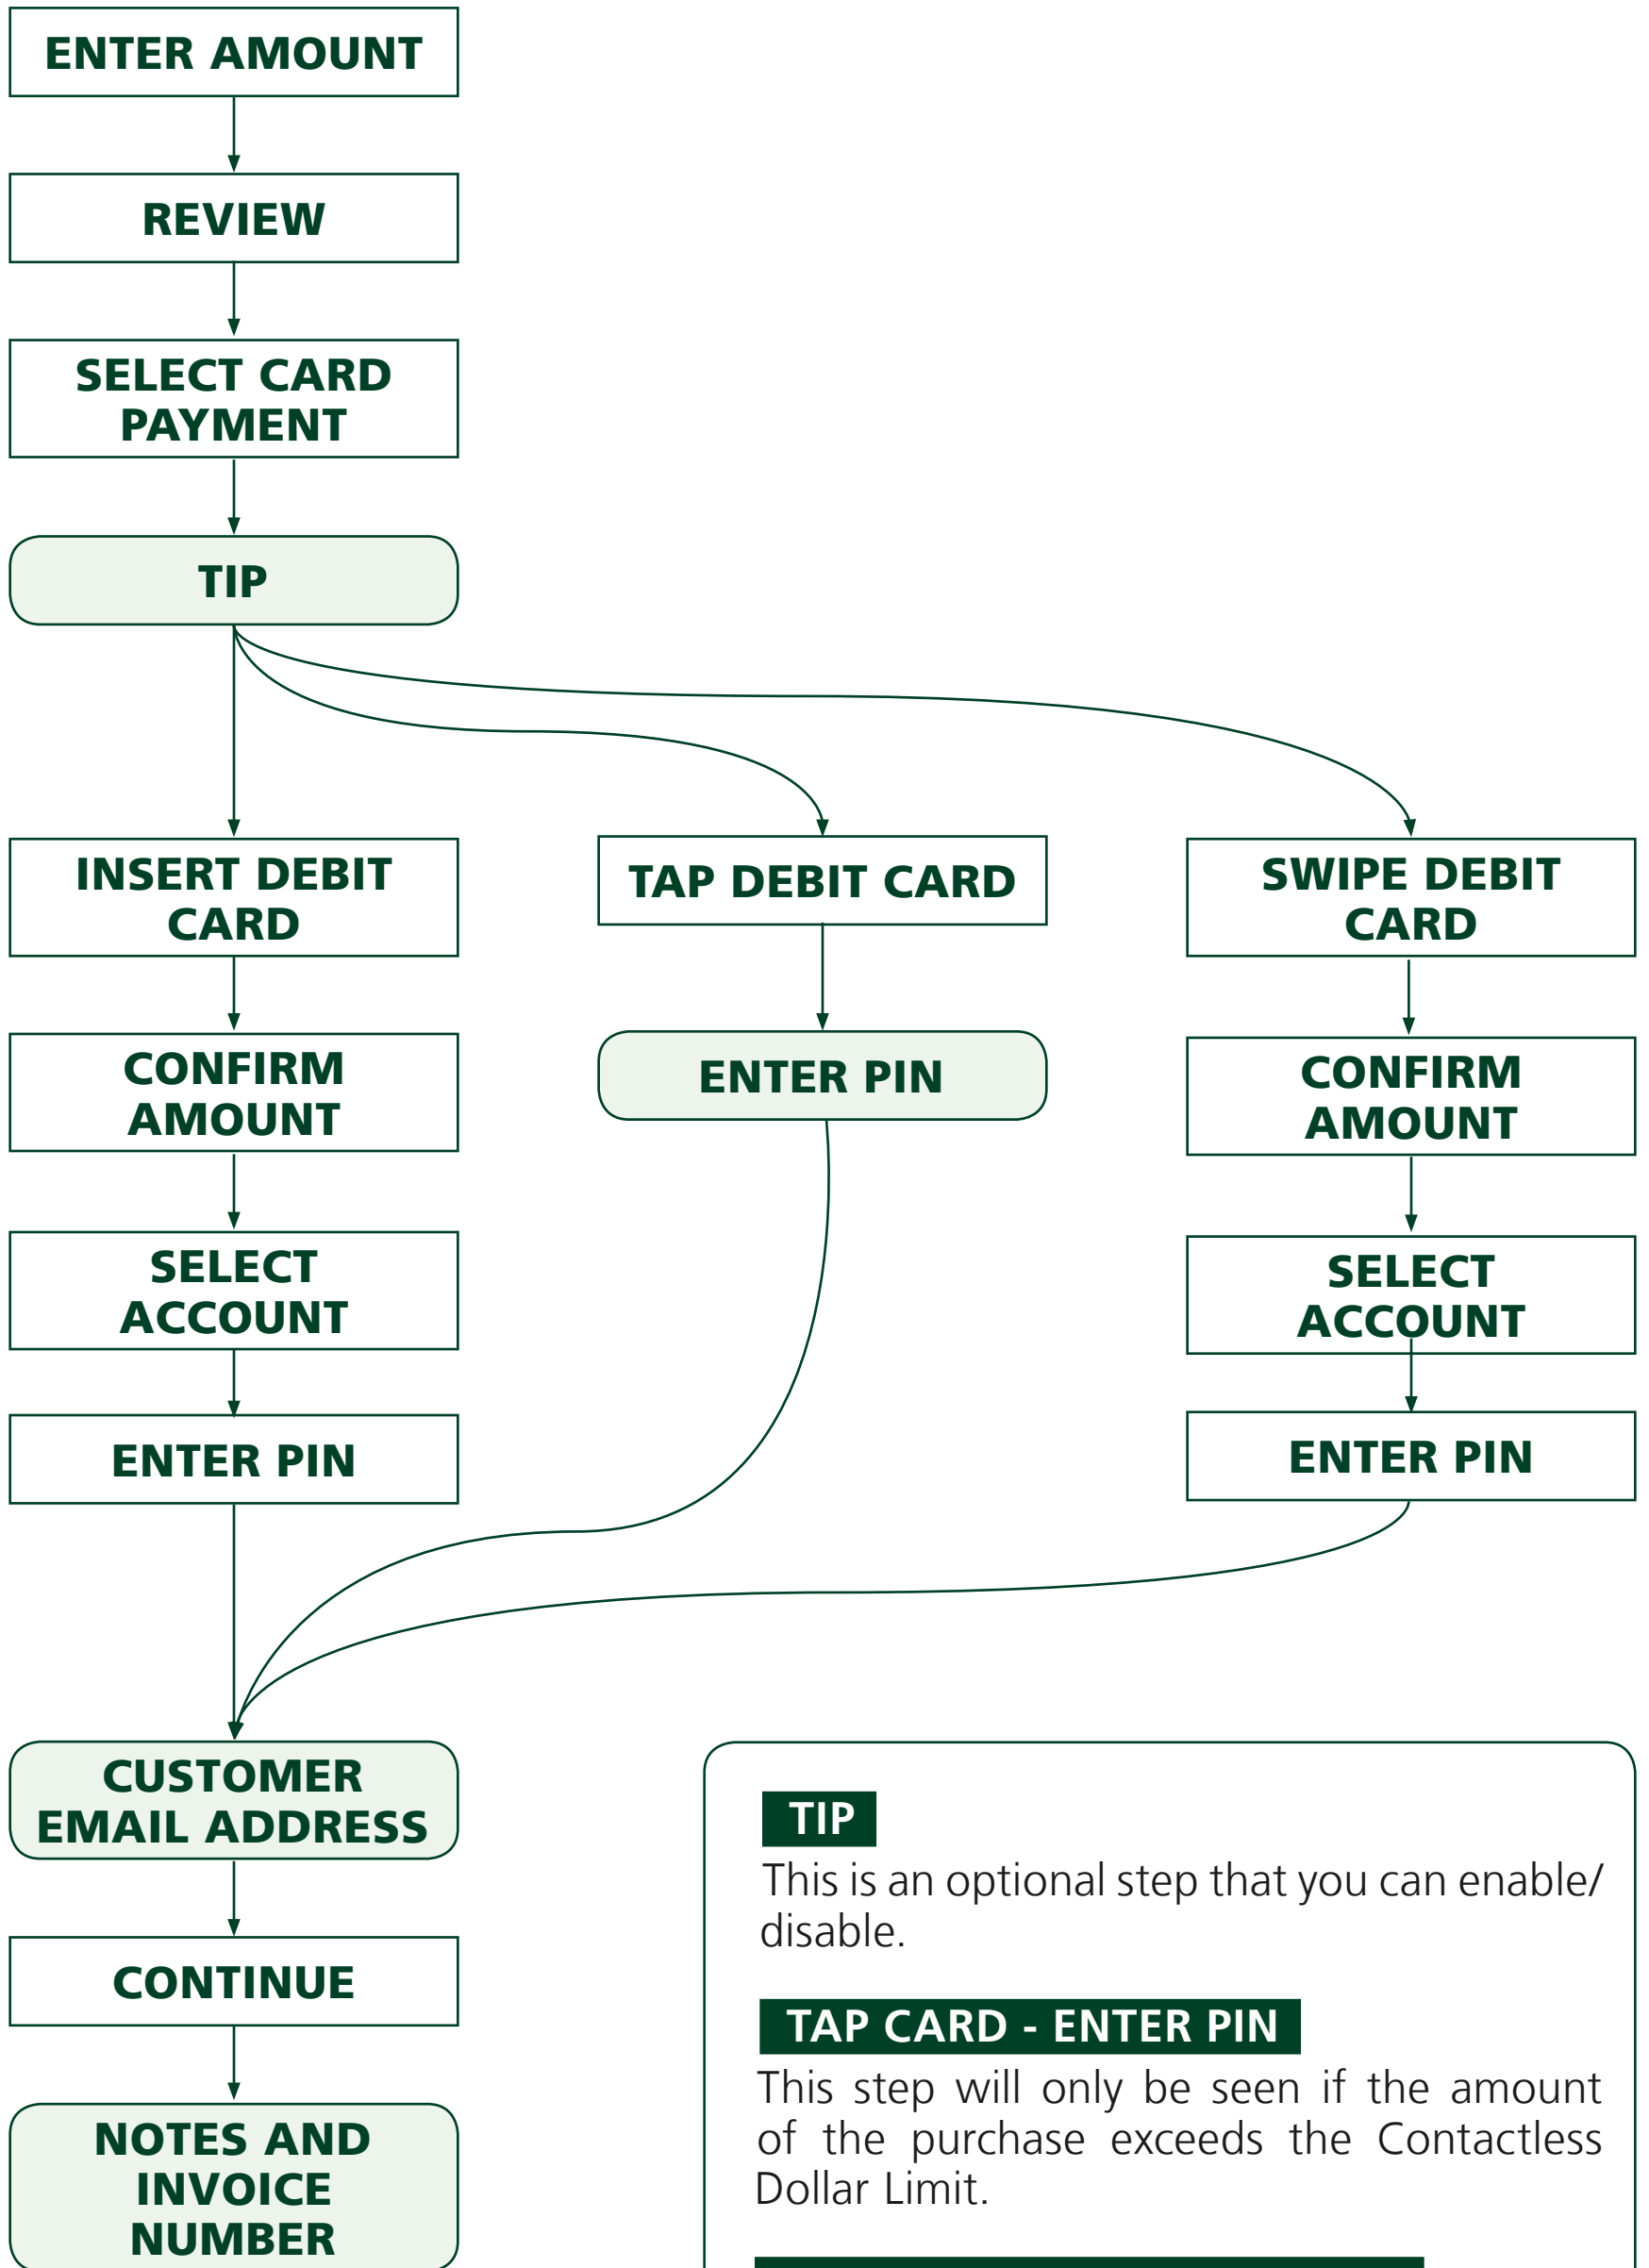

TIP

This is an optional step that you can enable/disable.

TAP CARD - ENTER PIN

This step will only be seen if the amount of the purchase exceeds the Contactless Dollar Limit.

CUSTOMER EMAIL ADDRESS

This is an optional step. Tap **SKIP** to ignore it.

NOTES AND INVOICE NUMBER

This is an optional step. Tap **SKIP** to ignore it.